


INSTRUCTIONS FOR INSTALLING MAIL BOXES ON CURBED STREETS ... (A) STRAIGHT CURB (B) CUL-DE-SAC CURB

(A) STRAIGHT LINE CURB

(B) CUL-DE-SAC CURB

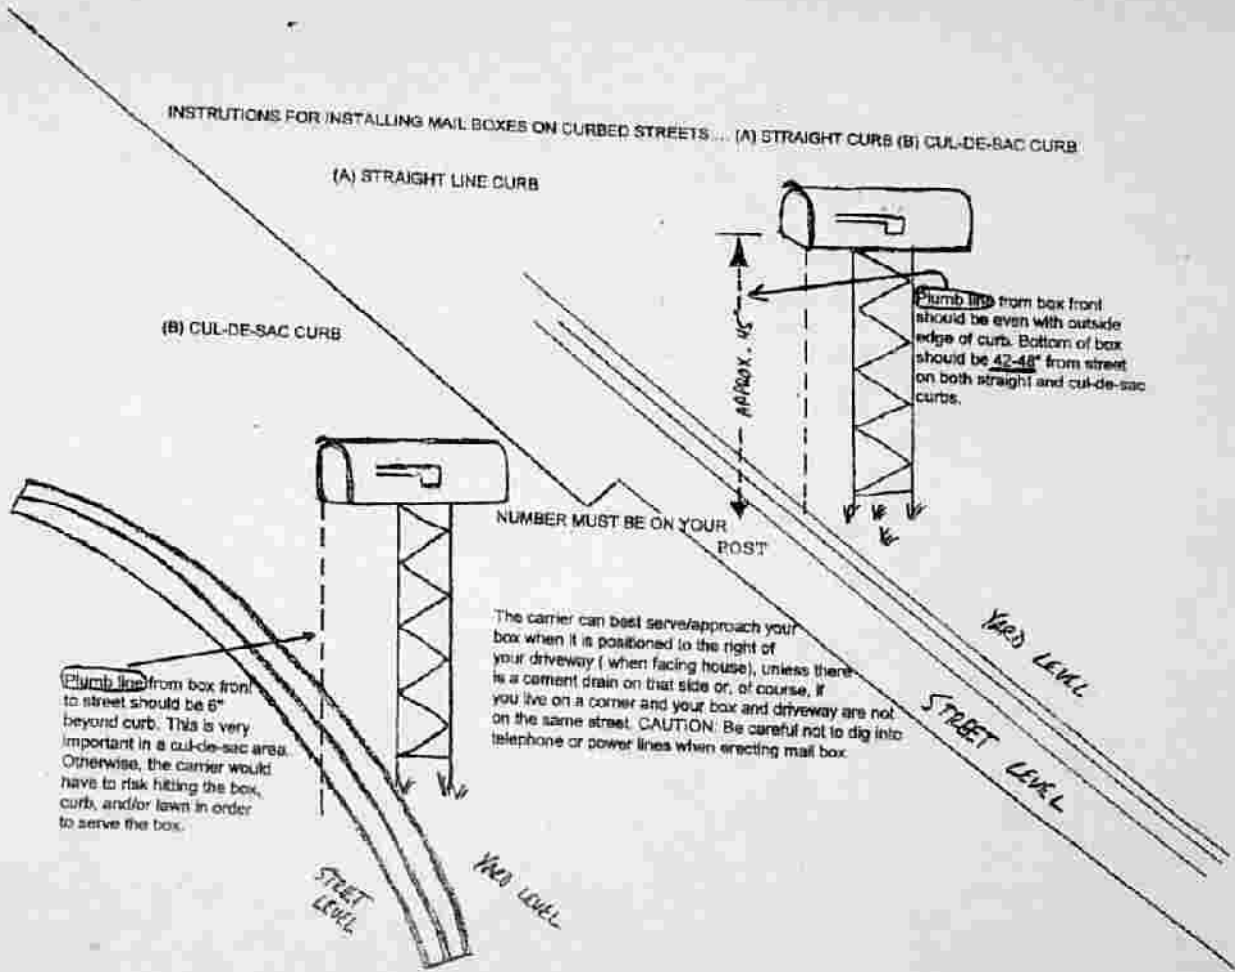

Plumb line from box front to street should be 6" beyond curb. This is very important in a cul-de-sac area. Otherwise, the carrier would have to risk hitting the box, curb, and/or lawn in order to serve the box.

NUMBER MUST BE ON YOUR ROOST

The carrier can best serve/approach your box when it is positioned to the right of your driveway (when facing house), unless there is a cement drain on that side or, of course, if you live on a corner and your box and driveway are not on the same street. CAUTION: Be careful not to dig into telephone or power lines when erecting mail box.

Plumb line from box front should be even with outside edge of curb. Bottom of box should be 42-48" from street on both straight and cul-de-sac curbs.

APPROX. 45"

STREET LEVEL

YARD LEVEL

YARD LEVEL

STREET LEVEL